

**CELANO 30" DUAL ZONE
WINE CELLAR AND BEVERAGE COOLER**

**MODEL NUMBER SERIES:
FWCDR6697-30S**

INSTRUCTION MANUAL

Read these instructions carefully before using your appliance, and keep it carefully.
If you follow the instructions, your appliance will provide you with many years of good service.

TABLE OF CONTENTS

Customer Care	4
Warning	5
Important Safety	6
Names of Parts and Accessories	7
Anti-tip Bracket	9
Handle	10
Operating Instruction	11
Adjusting the Temperature Setting	13
How to Remove a Sliding Shelf and Drawer	14
Care and Maintenance	17
Troubleshooting	18
Warranty	19

Customer Care

Thank you for purchasing a Forno product. Please read the entire instruction manual before operating your new appliance for the first time. Whether you are an occasional user or an expert, it will be beneficial to familiarize yourself with the safety practices, features, operation and care recommendations of your appliance.

Both the model and serial number are listed inside the product. For warranty purposes, you will also need the date of purchase .

Record this information below for future referenc

Product Information

Model Number : _____

Serial Number : _____

Date of Purchase : _____

Purchase Address And Phone :

Service Information

Use these numbers in any correspondence or services calls concerning your product.

If you received a damaged product, immediately contact Forno.

To save time and money, before you call for serviced, check the troubleshooting guide. It listed the causes of minor operation problems that you can correct yourself.



“Need some quick help? Simply scan the qr code and get access to our fast support form. We’re always here to assist you with any questions or concerns you may have. So, don’t hesitate to reach out!”

Services in Canada and Untied States

Keep the instruction manual handy to answer your questions. If you don’t understand something or need more assistance, please visit our website for fast support. Please provide us your name, number, address,serial number of the product that troubleshooting, proof of purchase, and a short description of the issue. A customer service representative will contact you as soon as possible. All warranty work needs to be authorized by FORNO customer service. All our authorized service providers are carefully selected and rigorously trained by us.



WARNING
FOR YOUR SAFETY

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages



This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word “DANGER,” “WARNING” or “CAUTION.” These words mean:



DANGER

- You can be killed or seriously injured if you don't immediately follow instructions.



WARNING

- You can be killed or seriously injured if you don't follow instructions.



CAUTION

- A potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.



WARNING : This product can expose you to chemicals including [Lead, lead and lead compound, which is [are] known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warning.ca.gov.

Tip Over Hazard

- A child or adult can tip the cellar and be killed.
- Install anti-tip bracket to floor per installation instructions.
- Slide cellar back so rear is engaged in the slot of the anti-tip bracket.
- Re-engage the anti-tip bracket if cellar is moved.
- Do not operate the cellar without anti-tip bracket installed and engaged.
- Failure to follow these instructions can result in death or serious injuries to children and adults.

WARNING

- To prevent damaging the door gasket, make sure to have the door all the way opened when pulling shelves out of the rail compartment.
- The appliance must be positioned so that the plug is accessible. Release the electric cord. Move your cabinet to its final location. Do not move your Cabinet while loaded with wine. You might distort its body. The wine cellar should be installed in a suitable place in order to avoid touching the compressor with hand.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- If the supply cord is damaged, it must be replaced by manufacturer of its Service agent or a similarly qualified person in order to avoid a hazard.


PLEASE DON'T TRY TO PLUG INTO OR EXTENSION THE CABLE IN ANY CASE.

IMPORTANT SAFETY INSTRUCTIONS



⚡WARNING⚡	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
<p>Read all instructions before using the Wine cooler.</p> <ul style="list-style-type: none">• DANGER or WARNING: Risk of child entrapment.• Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous even if they will "just sit in the garage a few days"• Before you throw away your old Wine cooler/Beverage Cooler: Take off the door. Leave the shelves in place so that children may not easily climb inside.• Never allow children to operate, play with, or crawl inside the appliance.• Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.• Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.• WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction;• WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those Recommended by the manufacturer;• To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.• WARNING: Do not damage the refrigerant circuit;• WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer.• If the refrigerant of these appliances are R600a , Flammable and explosive articles should not be put in or near the cabinet, to avoid the fire or explode caused. <p style="text-align: center;">-Save these instructions.</p>	

DESCRIPTION OF THE PRODUCT

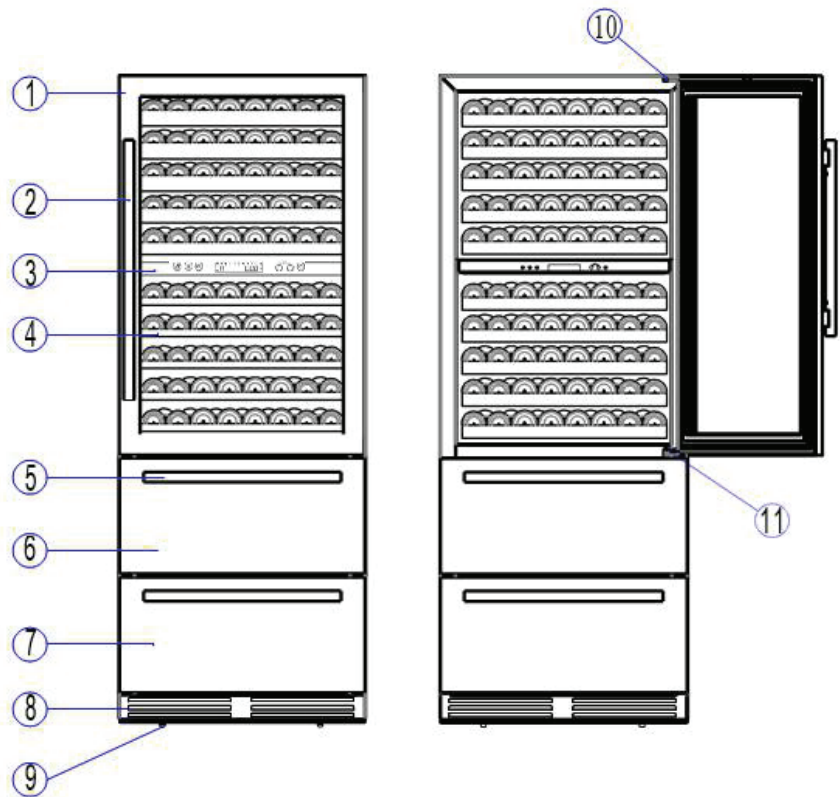1. Glass door
2. Glass door handle
3. Control panel
4. Shelf
5. Drawer handle (x2)
6. Upper drawer
7. Lower drawer
8. Ventilation kickplate
9. Adjustable legs
10. Upper hinge
11. Lower hinge



PART LIST

	<p>Anti-tip bracket</p>	<p>2 pcs</p>
	<p>Expansion bolt</p>	<p>2 pcs</p>

Name of Parts and Accessories (continued)


	4mm Hexagon wrench	1 pcs
	2.5mm Hexagon wrench	1 pcs
	Forno Hexagon wrench	1 pcs
	Handle	3 pcs
	Plastic cap	3 pcs

Installation

Anti-tip bracket installation


To avoid the risk of serious personal injury or damage to the appliance due to the instability of the appliance, it must be fixed to the floor with anti-tip brackets and screws (supplied). Before installing, carefully read these instructions.

1. Take the fixing brackets (2 pcs) and the expansion bolts (2 pcs) out of the instruction packet.
2. Drill holes into the floor according to the dimensions shown below. This will allow you to fix the brackets to the floor. According to the size and location, the holes on the floor should be $\varnothing 0.39$

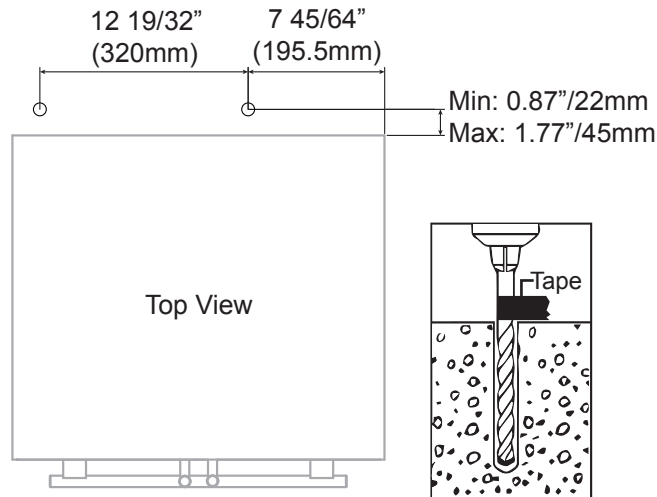


TIP: Use painter's tape to judge how deep of a hole you are drilling. First, cut a piece of painter's tape several inches long. Then, place the tape on your drill bit at the depth of the expansion bolts shield to drill. Once you reach the tape, you know when to stop drilling. Don't drill too deep

3. (A) Next insert the expansion bolt into the drilled hole. Make sure it is flush to the floor.
(B) Unscrew the nut, washer and lock ring from the screw. (10mm).

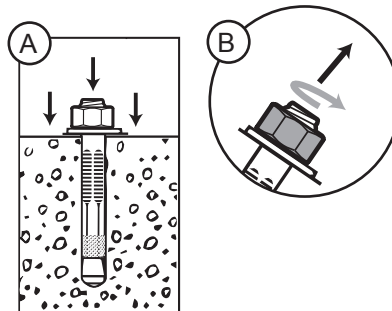


4. Next, align the bracket hole with the screw and reattach the washer and lock ring. Finally, tighten the nut with a wrench or socket to the maximum. As you tighten the shield, it will bend outwards, creating an anchor that provides extra security for your unit.

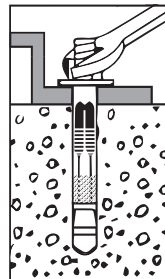

Installation (continued)


5. Push the appliance back into its place, Ensure that the bottom of the opening slides under the bracket, as shown in the example below.

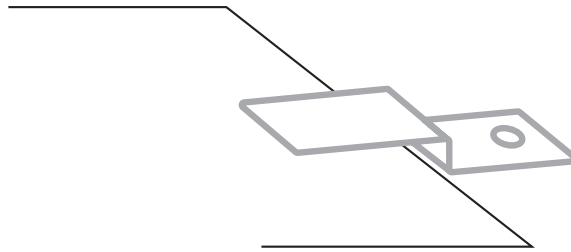

If the unit is not stable, pull back the appliance and repeat the previous step until the unit is stable.
NOTE: IF THE UNIT IS RELOCATED, THE BRACKET MUST BE REMOVED AND RE-INSTALLED TO ITS NEW LOCATION.

Installing The Handle

1. Locate the handle over the pins on the door panel.
2. Fix the handle by tighten the screw.

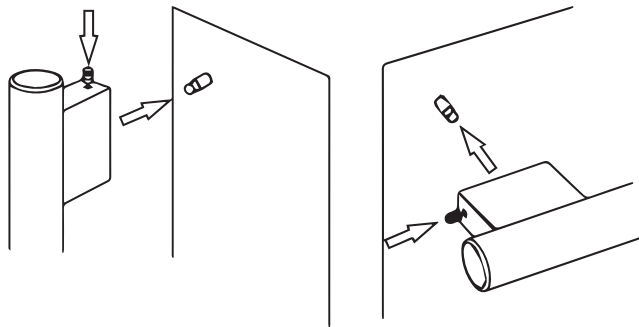

Installation of Your Wine Cooler/Beverage cooler

- Installation: This appliance is designed for free-standing installation or built-in (fully recessed) setup. Refer to the sticker located at the back of the appliance for installation guidelines.
- Intended use: The appliance is exclusively intended for the storage of wine or beverages. Please refrain from using it for any other purpose.
- Level Surface: Ensure to place the appliance on a level surface capable of supporting its full weight, especially when fully loaded. To check for levelness, place a small ball on top and make sure it does not roll in any direction. If needed, adjust the front leveling leg located at the bottom of the Wine Cooler/Beverage Cooler.
- Avoid Direct Sunlight and Heat: Position the appliance away from direct sunlight and heat sources such as stoves, heaters, or radiators. Direct sunlight can affect the acrylic coating, and heat sources may lead to increased electrical consumption. Extremely cold ambient temperatures might also impact the unit's performance.
- Moisture Avoidance: Do not place the unit in moist areas to prevent any damage.
- Electrical Safety: Plug the Wine Cooler/Beverage Cooler into an exclusive, properly installed, and grounded wall outlet. Never cut or remove the third (ground) prong from the power cord. If you have any questions about power or grounding, consult a certified electrician or an authorized service center.

Before using Your Wine cooler

- Remove the exterior and interior packing.
- Before connecting the Wine cooler/Beverage cooler to the power source, let it stand upright for approximately 12 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation
- Clean the interior surface with lukewarm water using a soft cloth.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments;
 - catering and similar non-retail applications
- When disposing your appliance, please choose an authorized disposal site.

Attention

- Store wine in sealed bottles,
- Do not overload the cabinet;
- Do not open the door unless necessary;
- Do not cover shelves with aluminum foil or any other shelf material which may prevent air circulation;
- Should the Wine cooler/Beverage cooler be stored without use for long periods it is suggested, after a careful cleaning, to leave the door ajar to allow air to circulate inside the cabinet in order to avoid possible formations of condensation, mold or odors

Ambient Room Temperature Limits



- This appliance is designed to operate in ambient temperatures specified by its temperature class.

Class	Symbol	Ambient Temperatures range(°C)
Extended Temperate	SN	+ 10 to + 32
Temperate	N	+ 16 to + 32
Subtropical	ST	+ 16 to + 38
Tropical	T	+ 16 to + 43


Operating Instruction (continued)

Many cans and bottles may differ in size and dimensions. As such the actual number of bottles you may be able to store may vary.




Shelf One to 10 - 15 bottles per shelf. This model can store 150 standard bottles. The standard bottles as below:

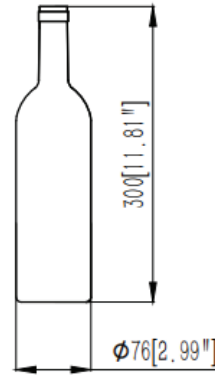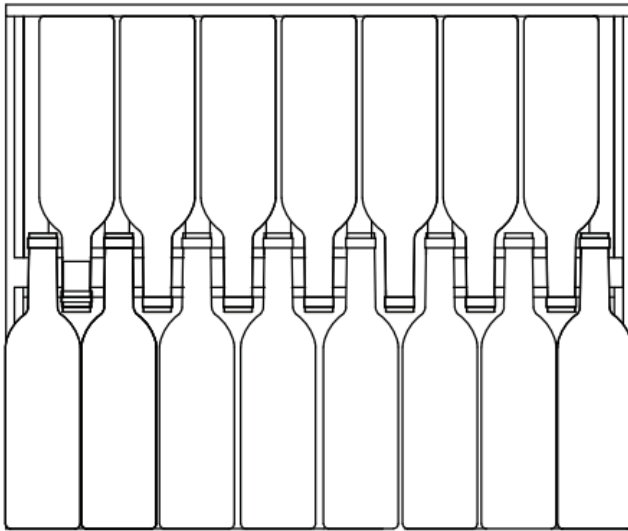





This model can store 252 standard cans.

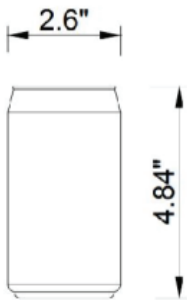




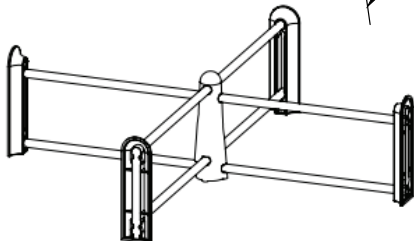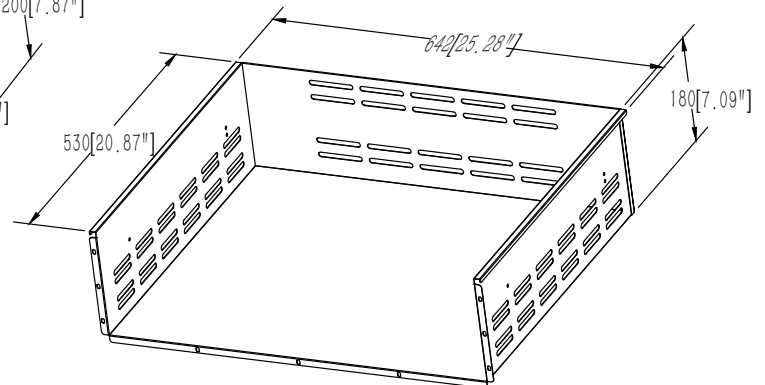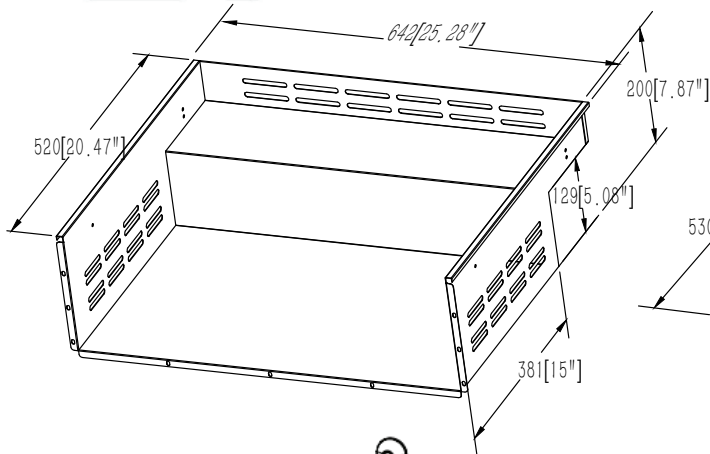



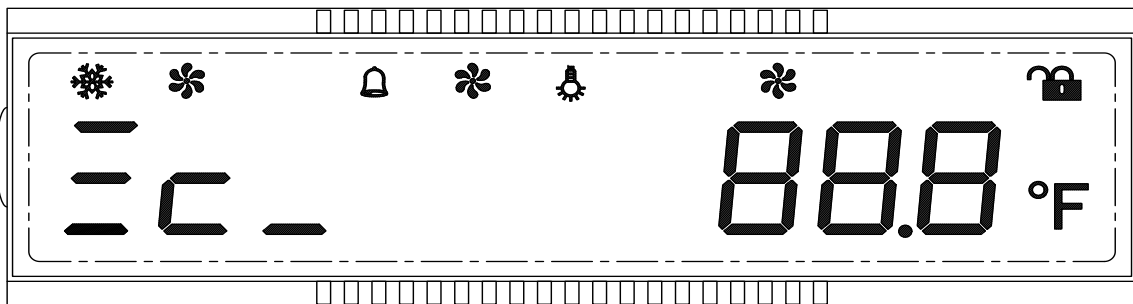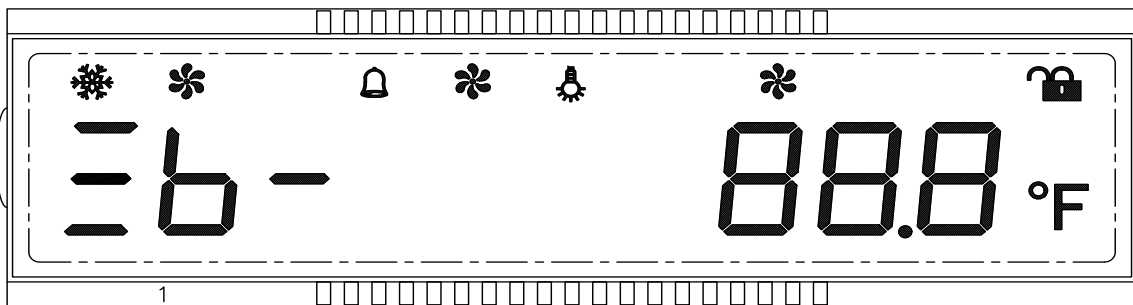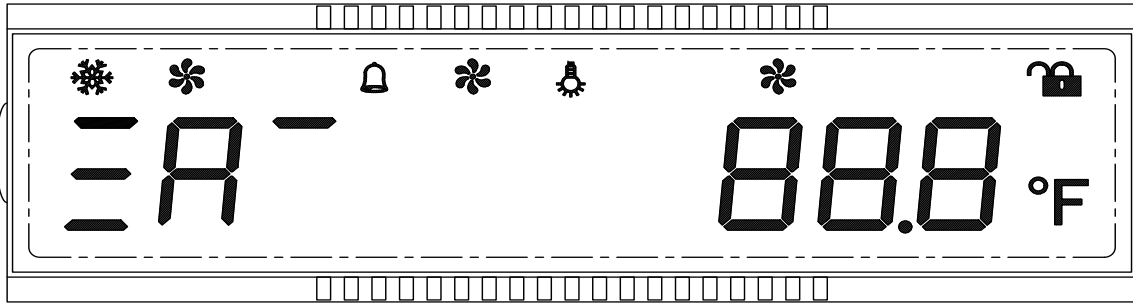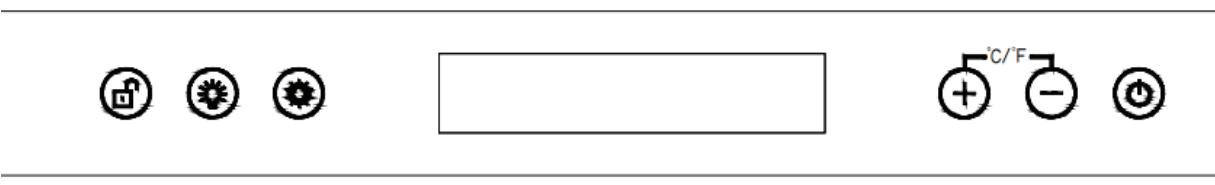 

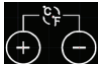
The stated loading capacity is based on the standard-size soda drink with 2.6" in diameter and 4.84" in height. (330M L)





Movable grid organizer as optional



- Right combination  button: Press  and  at the same time for 3 seconds to change the temperature display between Celsius and Fahrenheit.
- Pressing  it will show A, touch it again it will show B, again it will be show C, display window show A is the temperature of upper zone, b is the temperature of lower zone, c is the temperature of drawer zone.
- Adjust the temperature in 1 degree increments by pressing the right  and  buttons until desired temperature is reached.
- Light button  : Short press  to turn on or off, Long Press  to change the colors (White/Blue/Red) or to enter mode of White-Blue-Red running change.
- Lock button-Press  3 seconds to unlock/lock all the buttons.

Setting The Temperature Controls

- **Upper compartment:** The temperature setting can be adjusted from 5°C to 12°C / 41°F to 54°F.
- **Lower compartment:** The temperature setting can be adjusted from 12°C to 20°C / 54°F to 68°F
- **Drawer compartment:** The temperature setting can be adjusted from 2°C to 10°C / 36°F to 50°F.

Sabbath Mode: specifically, the current method is to manually press the key  3 seconds to enter and automatically exit after 42 hours, or manually press  for 3 seconds to exit; In Sabbath mode, the light is invalid, but the compressor is still running.

Attention

If the unit is unplugged, power lost, or turned off, you must wait 3 to 5 minutes before restart the unit. If it is used for the first time or not used for a long time, the temperature will be different from the set temperature and the LCD display temperature. After a period of operation, the temperature will recover.

Shelves

- To prevent damaging a door gasket, make sure to open the door all the way before pulling the shelves out of their track. Make sure the door is opened all the way.
- For easy access to the storage content, you must pull the shelves approximately 1/3 out of the track, however this unit was designed with a notch on each sides of the shelf tracks to prevent bottles from falling.

Please refer to the following direction for replace shelf with different method. If need to take out any shelf, use one hand to press down the right plastic notch as shown in Figure A and at the same time lift the left plastic notch by other hand as shown Figure B. Hold both notches and then proceed to pull out the shelf slowly. Contact our service department if assistance is needed.

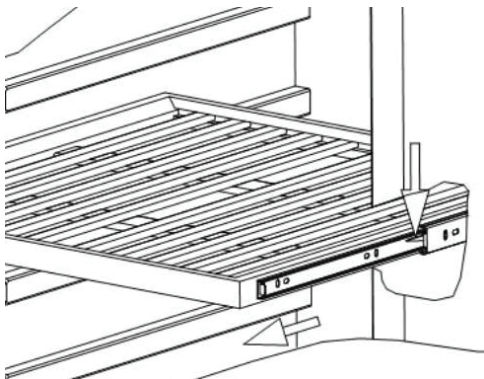


Figure A


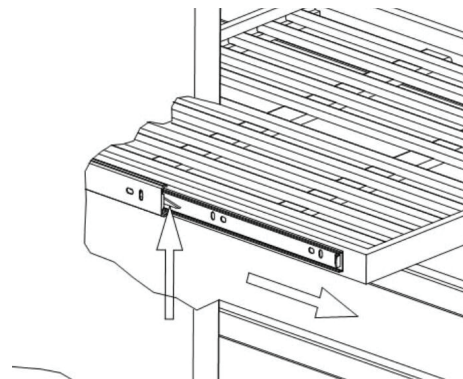


Figure B


Drawer removal and installation instructions

1. Pull the drawer 100% out of the outside, if shown.
2. Find the rails left and right A and B lock card, A downward pressure, B upward, press and hold while pulling the drawer out, you can remove
3. Installation method: re-installation of direct drawer inner track corresponding to the installation of the outer slot of the box guide to push inward, pay attention to the certain parallel can be installed to complete


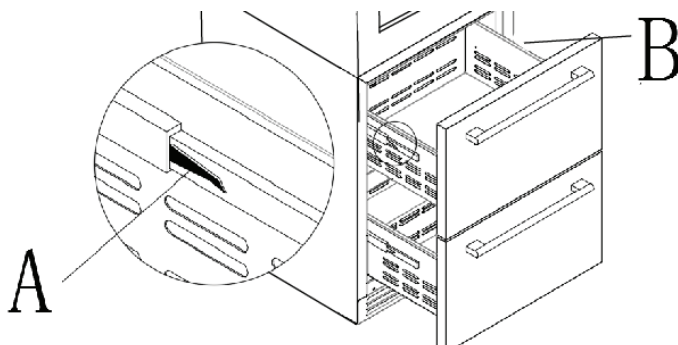


Reverse the door with hidden hinge


This appliance has the capability of the door opening from either the left or right side. The unit is delivered to you with the door opening from the left side. If you want to reverse the opening direction, please follow the below instruction.

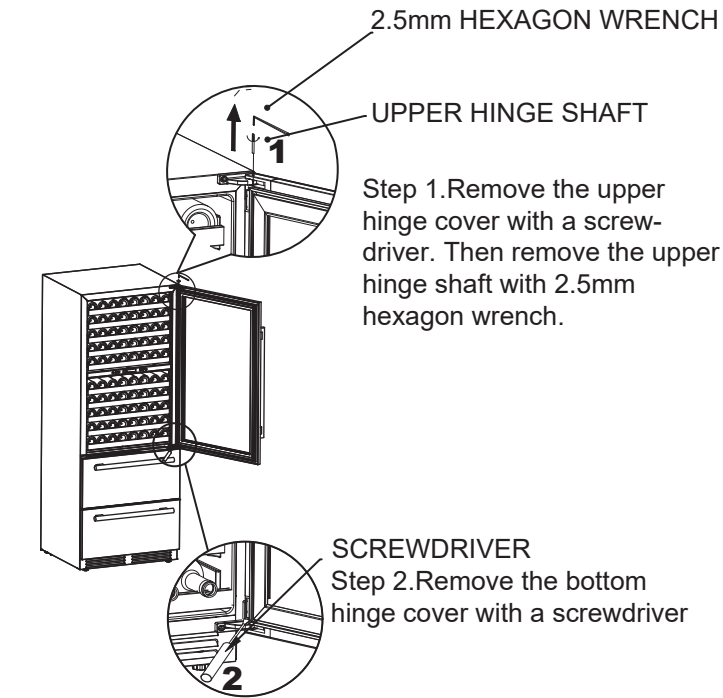

Step 7. Tighten screws with 4mm Hexagon wrench in turn.

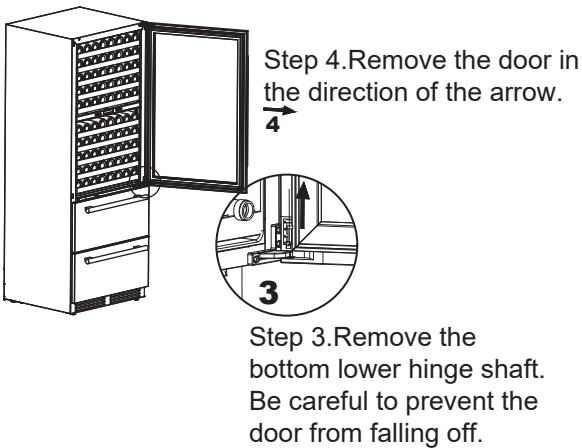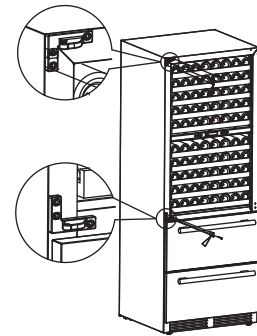


Step 8. Rotating door 180° and Install the door in place.

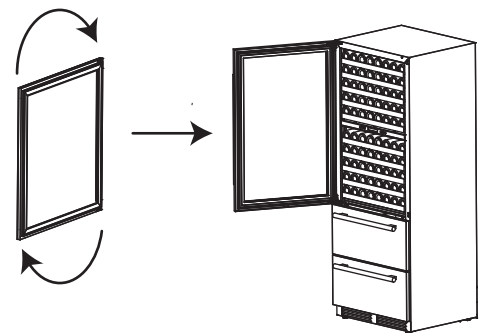


Operating Instruction (continued)

Step 5. Remove the upper and lower door hinges with 4mm Hexagon wrench.


Step 6. Install the upper and lower door hinges in the opposite position on the other side. Figure 5 AND 6 .

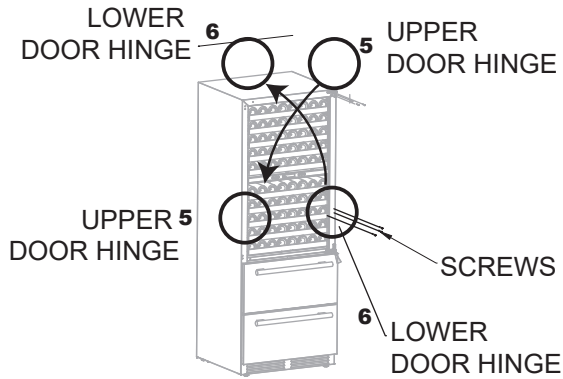

Step 9. Install the upper hinge and tighten it with 2.5mm hexagon wrench. Then install the lower hinge shaft and cover the door shaft cover.

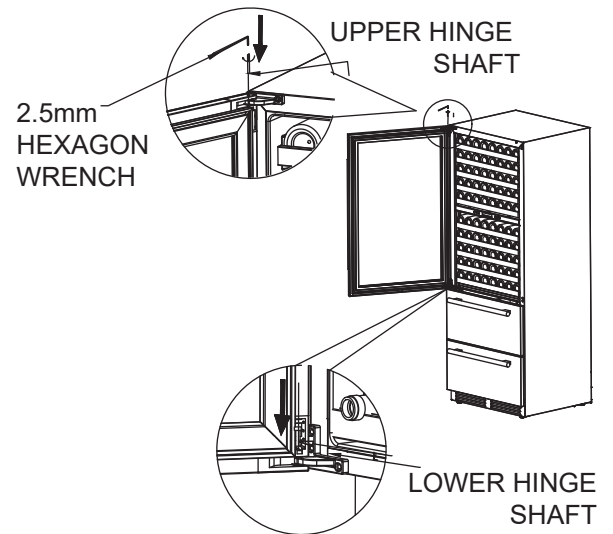

Installation specifications for built-in purposes

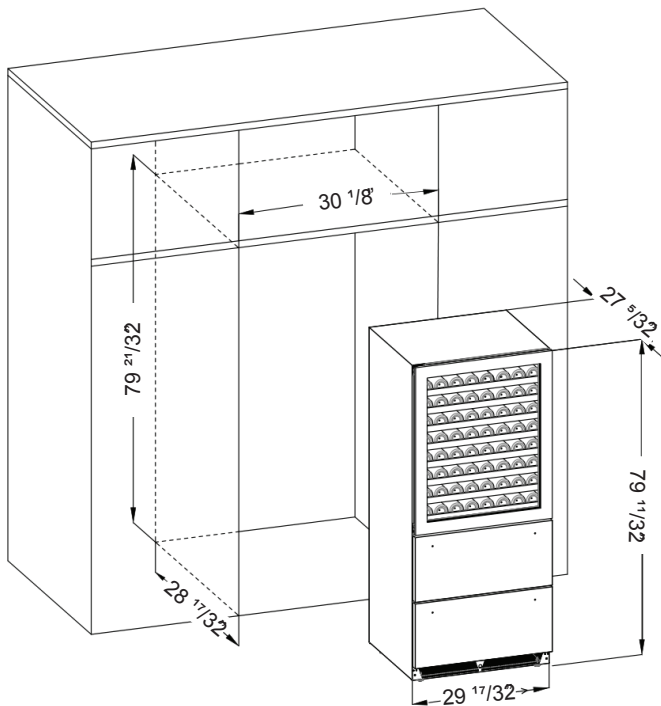


Charcoal Filtration system:

Your wine is a living object that breathes through the cork of its bottle. In order to preserve the quality and taste of your fine wines, they must be stored at the ideal temperature and ambient conditions. Your cellar is equipped with an active charcoal filtration system to ensure air purity, cooling efficiency, and to maintain an odor free cabinet for the storage of your fine wines. The filter assembly is located at the rear panel inside your cellar. Keep in mind, that this filter must be changed every 12 months.

Operating Instruction (continued)

To replace your filter

1	Remove the bottles of wine stored on the two (2) shelves in front of the filter.
2	Remove the shelves and set aside to be replaced once you have changed the filter.
3	Hold the filter and turn it at 45 degrees in the counter
4	Remove the existing filter and replace with a new one.
5	Put the new filter into the hole and then turn the filter at 45 degrees in clockwise direction.

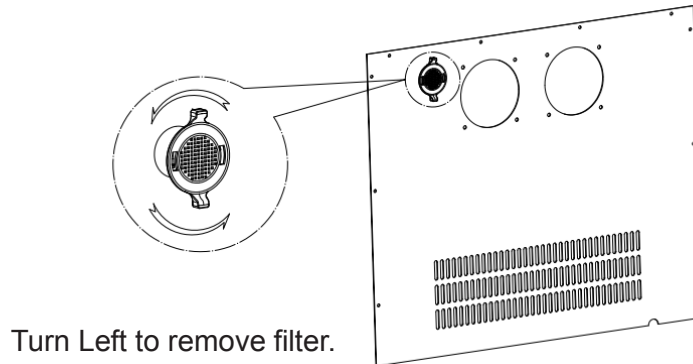

Care and Maintenance:

- Clean your Wine Cooler/Beverage Cooler

Turn off the power, unplug the appliance, and remove all items including shelves and rack. Wash the inside surfaces with a warm water and mild solution. Wash the shelves with a mild detergent solution. Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts. Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

- Power failure

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a long period of time, you need to take the proper steps to protect your contents.

- Vacation Time

Short vacations: Leave the Wine Cooler/Beverage Cooler operating during vacations of less than three weeks. If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

- Moving your Wine Cooler/Beverage Cooler:

- Remove all items.
- Take out the loose items inside the wine cooler / Beverage Cooler (such as shelf), or fix the loose items with the foam
- Turn the adjustable leg up to the base to avoid damage.

Tape the door shut.

Be sure the appliance stays secure in the upright position during transportation. Also protect outside of appliance with a blanket or similar items.

- Energy saving tips

The Wine Cooler/Beverage Cooler should be located in the coolest area of the room, away from producing appliances, and out of the direct sunlight.

Troubleshooting

Problems with your Wine Cooler/Beverage Cooler:

You can solve many common Wine Cooler/Beverage Cooler problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you solve the problem before calling the servicer.

Problem	Possible Cause	REMEDY
Wine Cooler/Beverage Cooler does not operate	No plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.	Connect the appliance. Switch on the appliance. Replace the broken fuse in your fuse box or reset the breaker. Make sure the outlet has sufficient amperage.
Wine Cooler / Beverage Cooler is not cold enough	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.	Check the set temperature. Set a lower temperature. Do not open door or drawers more often than necessary. Close door or drawers properly. Check the seal and clean or replace. Clean the condenser when necessary. Clear the obstructions and wipe off the dust.
Turns on and off frequently	The room temperature is hotter than normal. Overload of the cabinet The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.	Put the appliance in a cooler place. Leave the appliance to work for a while until the set temperature has been reached. Do not open the appliance more often than necessary. Close the door or drawer properly. Check the all gasket seals and clean or replace it.
The light does not work	Not plugged in. The circuit breaker tripped or a blown fuse. The bulb has burned out. The light button is "OFF"	Connect the appliance. Switch on circuit breaker or replace fuse. Switch on the light.
Vibrations	Check to sure that the Wine Cooler/Beverage Cooler is level.	Level the appliance with the adjustable feet.
Too much noise	The rattling noise may come form the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling. Contraction and expansion of the inside walls may cause popping and crackling noises.	
	The Wine Cooler/Beverage Cooler is not level.	Check to make sure that the refrigerator is level, and that it is not in contact with another appliance or furniture.
The door will not close properly	The Wine Cooler/Beverage Cooler is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.	Level the appliance with the adjustable feet. Clean the drawer gaskets. Check the racks and bins and refit correctly.

Before disposal of the appliance.

1. Disconnect the main plug from the main socket.
2. Cut off the main cable and discard it.

Warranty

What this limited warranty covers:

The Warranty coverage provided by Forno Appliances in this statement applies exclusively to the original Forno appliance ("Product") sold to the consumer ("Purchaser") by an authorized Forno dealer/distributor/retailer, purchased and installed in the United States or Canada, and which has always remained within the original country of purchase (the United States or Canada). Warranty coverage is activated on the date of the Product's original retail purchase and has a duration of two (2) years.

Warranty coverage is non-transferable. In the event of replacement of parts or of the entire product, the replacement Product (or parts) shall assume the remaining original Warranty activated with the original retail purchase document. This Warranty shall not be extended with respect to such replacement. Forno Appliances will repair or replace any component/part which fails or proves defective due to materials and/or workmanship within 2 years of the date of the original retail purchase and under conditions of ordinary residential, non-commercial use. Repair or replacement will be free of charge, including labor at standard rates and shipping expenses. Purchaser is responsible for making the Product reasonably accessible for service. Repair service must be performed by a Forno Authorized Service company during normal working hours.

Important

Retain proof of original purchase to establish warranty period. Forno's liability on any claim of any kind, with respect to the goods and/or services provided, shall in no event exceed the value of the goods or service or part thereof which has given rise to the claim.

30-Day Cosmetic Warranty

The Purchaser must inspect the product at the time of delivery. Forno warrants that the Product is free from manufacturing defects in materials and workmanship for a period of thirty (30) days from date of the original retail purchase of the Product.

This coverage includes:

- Paint blemishes
- Chips
- Macroscopic finish defects

Cosmetic warranty does NOT cover:

- Issues resulting from incorrect transport, handling and/or installation (e.g.: dents, broken, warped or deformed structures or components, cracked or otherwise damaged glass components);
- Slight color variations on painted/enamelled components;
- Differences caused by natural or artificial lighting, location or other analogous factors; > stains/corrosion/discoloration caused by external substances and/or environmental factors; > labor costs, display, floor, B-stock, out-of-box, "as is" appliances and demo units.

How to receive service

To receive warranty services, the Purchaser must contact the Forno Support department in order to determine the problem and the required service procedures. Troubleshooting with a customer service representative will be necessary before

moving forward with the service. Model number, serial number and date of original retail purchase will be requested.

Warranty Exclusions: What Is Not Covered.

- Use of the Product in any non-residential, commercial application.
- Use of the Product for anything other than its intended purpose.
- Repair services provided by anyone other than a Forno Authorized Service agency.
- Damages or repair services to correct services provided by unauthorized parties or the use of unauthorized parts.
- Installation not in accordance with local/state/city/county fire codes, electrical codes, gas codes, plumbing codes, building codes, laws or regulations.
- Defects or damage due to improper storage of the Product.
- Defects, damage or missing parts on products sold out of the original factory packaging or from displays. > Service calls or repairs to correct an incorrect installation of the Product and/or related accessories.
- Replacement of parts/service calls to connect, convert or otherwise repair the electrical wiring and/or gas line in order to properly use the product.
- Replacement of parts/service calls to provide instructions and information on the use of the Product.
- Replacement of parts/service calls to correct issues arising from the product being used in a manner other than what is normal and customary for residential use.
- Replacement of parts/service calls due to wear and tear of components such as seals, knobs, pan supports, shelving, cutlery baskets, buttons, touch displays, scratched or broken ceramic-glass tops.
- Replacement of parts/service calls for lack of/improper maintenance, including but not limited to: build up of residues, stains, scratches, discoloration, corrosion.
- Defects and damages arising from accidents, alteration, misuse, abuse or improper installation.
- Defects and damages arising from Product transport, logistics and handling. Inspection of the product must be made at time of delivery. Following receipt and inspection, the selling dealer/delivery company must be notified of any issues arising from handling, transport and logistics.
- Defects and damages arising from external forces beyond the control of Forno Appliances, including but not limited to wind, rain, sand, fires, floods, mudslides, freezing temperatures, excessive moisture or extended exposure to humidity, power surges,
- Lightning, structural failures surrounding the appliance and other acts of God.
- Products whose serial number has been altered/damaged/tampered with. In no case shall Forno be held liable or responsible for damage to surrounding property, including furniture, cabinetry, flooring, panels, and other structures surrounding the Product. Forno is neither liable nor responsible for the Product if it is located in a remote area or an area where certified trained technicians are not reasonably available. Purchaser must bear any transportation and delivery costs of the Product to the nearest Authorized Service Center or the additional travel expenses of a certified trained technician

Warranty

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE THAT SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON FORNO. FORNO SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, TIME AWAY FROM WORK, MEALS, LOSS OF FOOD OR BEVERAGES, TRAVELING OR HOTEL EXPENSES, EXPENSES TO RENT OR PURCHASE APPLIANCES, REMODELING/CONSTRUCTION EXPENSES IN EXCESS OF DIRECT DAMAGES WHICH ARE UNDENIABLY CAUSED EXCLUSIVELY BY FORNO OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF FORNO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST FORNO BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY FORNO AND CAUSING THE ALLEGED DAMAGE. WITHOUT PREJUDICE TO THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT SOLD BY FORNO THAT IS NOT A DIRECT RESULT OF NEGLIGENCE ON THE PART OF FORNO THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NON-TRANSFERABLE, AND STATES YOUR EXCLUSIVE REMEDY.



Correct Disposal of this product:

This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.



FOR
FAST SUPPORT
EMAIL AT INFO@FORNO.CA 

Customer Support: Call 1-866-231-8893 or email: info@forno.ca