



# INSTRUCTION MANUAL

## INFRARED TOWER HEATER

MODEL NUMBER: COH40007

ITEM NUMBER: T05-G15D

Thank you for purchasing your new  
INFRARED TOWER HEATER



### **DO NOT RETURN THIS ITEM TO THE STORE**

Should you encounter problems after following all the steps herein contained please contact our Customer Support:  
Call 1-888-227-3340 or email: [customerservice@dekoliving.com](mailto:customerservice@dekoliving.com). Kindly provide the model number, place and date of purchase and a short description of the problem.

**LIMITED WARRANTY** This product has a 1 year Limited Warranty. This warranty is limited to the replacement of defective parts only. Labor charges and/or damage incurred during installation, repair, replacement as well as incidental and consequential damages connected with the above are excluded. Any damage to this product as a result of neglect, misuse, accident, improper installation or use other than the purpose **SHALL VOID THIS WARRANTY**



**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**



Please read and understand this entire manual before attempting to assemble, operate or install the product. Failure to follow the dangers, warnings and cautions contained in this owners manual may result in a fire or explosion causing damage to property, serious bodily injury or death

08/2024



## **WARNING**

FOR YOUR SAFETY

### **For Indoor Use Only**

(inside any enclosure)

**Installer:** Leave these instructions with the consumer.

**Consumer:** Keep these instructions for future reference.

1) Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.

 
2) Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.

3) Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury or death.

1. Read all instructions before using this unit.
2. **DO NOT** leave this unit unattended when in use.
3. This heater will get hot when in use. Do not touch hot surfaces.
4. **Caution:** Some parts of this product can become very hot and cause burns. Particular attention has to be given when children and vulnerable people are present.
5. **DO NOT** move the unit when in use. Wait until the heater is completely cool before moving and check that it has been unplugged from the power supply.
6. Position the unit at least 1m away from highly combustible materials such as furniture, trees, leaves, dry grass and bushes.
7. The heater must be a minimum of 1.8m away from the ground and a minimum of 0.5m away from the ceiling of a building or overhanging items.
8. The heater must not face with the heating element pointing upwards towards a ceiling. The heater element must be facing the area it is to heat.
9. **WARNING:** In order to avoid overheating do not cover the heater. It is not for drying clothes.
10. Keep children and pets at a safe distance from the unit.
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
12. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
13. **DO NOT** operate the heater if any signs of damage or malfunction manifest themselves.
14. **DO NOT** attempt to repair or adjust any electrical or mechanical functions on this unit. The unit does not contain any user serviceable parts. Only a qualified electrician should perform servicing or repairs. Attempting to repair the unit yourself will void your warranty.
15. If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. **DO NOT** handle the element with bare hands. If it is inadvertently touched, remove finger marks with a soft cloth and methylated spirits or alcohol, otherwise the marks will burn into the element causing premature heater failure.
17. **DO NOT** replace or attempt to replace the element in this product.
18. This product is suitable for indoor and outdoor use. Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
19. This product must not be left outdoors exposed to the elements for long periods of time.
20. **DO NOT** touch the plug with wet or damp hands.
21. **DO NOT** run the power cable under carpeting.
22. **DO NOT** cover the power cable with rugs, runner, or similar coverings. Arrange the power cable away from foot traffic and where it will not be tripped over.
23. **DO NOT** wind the power cable around the unit.
24. **DO NOT** insert or allow foreign objects to enter any ventilation or opening on the heater, as this may result in electric shock, fire, or damage to the heater.
25. To prevent a possible fire, do not block the air vents.
26. A heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
27. Where possible, avoid the use of an extension cable as this may overheat and cause a fire. However, if you have to use an extension cable, ensure it is suitable for the purpose, has been tested for outdoor use and preferably has an RCD device fitted or attached.
28. Always ensure the heater is plugged into a suitable socket, one that is tested for outdoor use.
29. To disconnect heater, turn controls to OFF, then remove plug from socket. Do not unplug by pulling on the power cable.
30. Always unplug the unit and ensure the unit is completely cold before moving, cleaning or storing.
31. This heater is intended for domestic use only and should not be used commercially for contract purposes. Any alternative use, not recommended by the manufacturer, may result in fire, electric shock, or injury to persons.
32. The use of attachments on the heater is not recommended.
33. **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when occupied by persons not capable of leaving a room on their own, unless constant supervision is provided.
34. Check exterior walls for areas of damage before installing the heater.
35. Always use on a dry, suitably strong, stable, flat and level surface.
36. Check exterior walls for communication and electrical cables and pipelines. Should any service lines be present in the immediate vicinity do not install your heater, find an alternative location to install this product.
37. **DO NOT** position directly above or below an electrical socket.
38. **DO NOT** remove any of the warning stickers or signs from the product.

**ALL ABOVE MUST BE EXACTLY FOLLOWED.**

Parts List

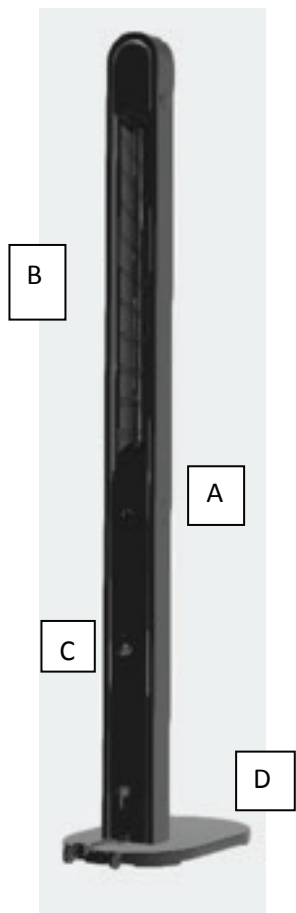


- A. Master Power Switch
- B. Heating Element
- 3. Power Cord Holder
- 4. Base with Wheels



Heater Body



 Stand

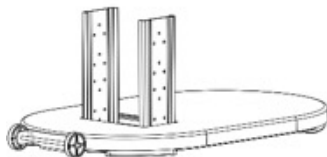

Base with Wheels



Power Cord Clamp



Bracket

Screws	Size	Quantity	Purpose
A	M3 x 12mm	2	Power cord clamp
B	M5 x 12mm	8	Heater body and stand


## Assembly Instructions
 
### Before assembly, please pay attention to below notes


- Remove all packaging and promotional material.
- Unwind the cord to its full length and place the heater on a firm, level surface in a stable, upright position.
- Visually inspect the air inlets and outlets to ensure that there are no blockages.
- For ease of assembly, only loosen the bolts and fully tighten when the assembly is complete.
- **WARNING!** Do not over tighten the bolts to avoid damaging your heater.
- Do not operate until it is secured.

### Freestanding Assembly:


1. Pass the power cord from the heater body through the stand. Secure the power cord to the inner surface of the stand with 2 screws (A) and clamp provide.
2. Insert the stand to the lower support following the arrow labels, secure with 4 screws (B), 2 on each side.
3. Insert the heater body to the stand following the arrow labels, secure with another 4 screws (B), 2 on each side.

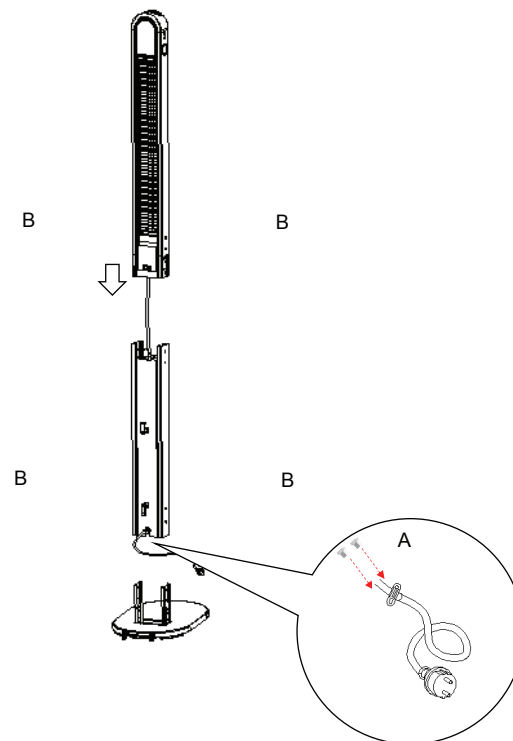

 Unscrew the four screws and secure the bracket in its original position.

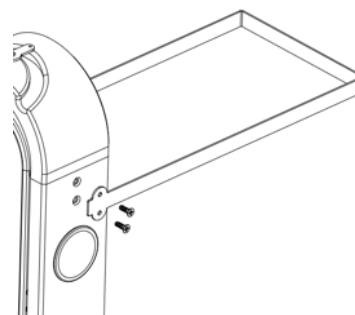

 **Note:** Make sure the direction is correct. When the cantilever is opened, the heating element is on the same side with the base.

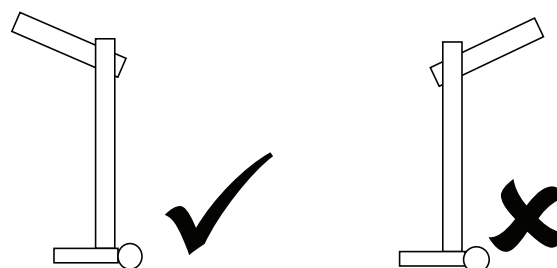

## Operating Instructions

 
**Note:** There may be an odour coming from the heater. This is normal during the break-in period or after long-term storage. Make sure the heater is placed in well-ventilated area and continue running it until the odour disappears.

### BEFORE FIRST USE

1. Remove all packaging and promotional material.
2. Unwind the cord to its full length and place the heat on a firm, level surface in a stable position.
3. Visually inspect that there are no blockages.



### OPERATION

- i. Check that the Master Power switch is in the OFF position.
- ii. Plug the heater into a 10Amp power outlet.
- iii. Turn ON the Master Power Switch located on the heater body.
- iv. Rotate the knob clockwise to turn on the heater to low heat level (750W).
- v. Continue to rotate the knob clockwise to turn the heater to high heat level (1500W).

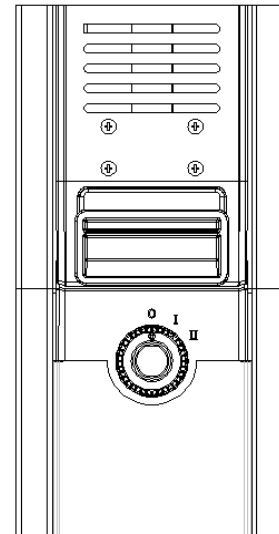


### CHANGING HEATING DIRECTION

  - i. Turn off the heater and allow the heater to cool (approximately 30 minutes).
- ii. Unlock the heating element by pushing the lock up above the knob.
- iii. Lift up the heating element carefully
- iv. Flip the U-shaped support upwards and secure it into the groove at the top of the heater
- v. Turn the lock to secure the U-shaped support

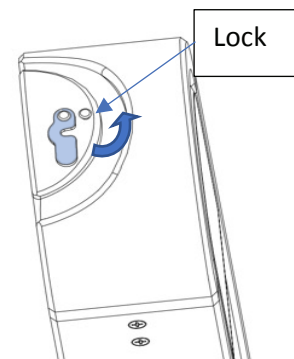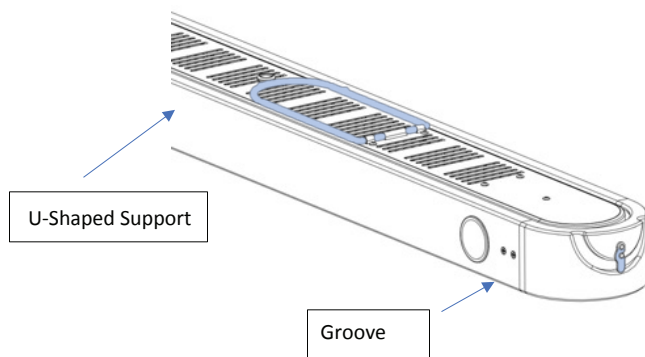

### RELOCATING THE HEATER

 - i. Turn off the heater and allow the heater to cool (approximately 30 minutes).
- ii. Fold the heating element to vertical position.
- iii. Unplug it from the socket and tie the power cord to the power cord holder.
- iv. Carefully hold the heater and tilt it.
- v. Move to desired location slowly.
- vi. Carefully put the heater upright.

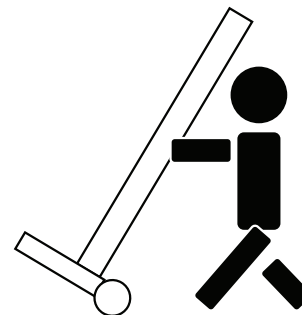

**Note:** To avoid overloading a circuit, do not plug the heater into a circuit that already has other appliances working.

## Safety Function

---

### Tip Over Switch

This heater includes a tip over switch, and can only operate in an upright position. If the unit is tilted or knocked over the power will be cut off automatically. When the heater is returned to an upright position, it will function normally.

### DISPOSAL OF THE UNIT

At the end of its working life, do not dispose of the heater with your household waste. Observe any local requirement regarding the appropriate disposal or recycling of electrical goods. Contact your local authorities for advice regarding recycling facilities in your area.

## Maintenance

---

**Attention!** Careful and regular maintenance of **Infrared Heater** is required to maintain a long and efficient operation of your appliance.

- Check the cleanliness of the Reflector and IR-Filament at least once a month. If necessary, apply cleaning and maintenance instructions.
- The number of checks may be increased considering the amount of the dust in the environment.
- Check the shape of the heater, inner wire and appearance while cleaning the appliance. If any problem with heater please contact professionals.
- Check the cable and plug while cleaning the heater. If any problem with heater please contact professionals.
- It is recommended to replace the mirror every two years to improve the operating efficiency.

## Cleaning

---

**Attention!** Regular and careful cleaning helps your **Infrared Heater** operate for longer years and more efficiently.

- For your safety, make sure the power is off before cleaning your appliance.
- Use a slotted screwdriver to remove the front grille from the frame's entrance.
- For your safety, make sure the power is off and the power cable plug must be unplugged.
- Reflectors and filaments must be cleaned with soft cloth, smooth brush. Cleaner should not too wet and could moist, the cleaner should not contain any chemicals.
- Avoid using cleaning tools(cleaners, etc.) that can damage reflectors.
- Insert a wire grid with a slotted screwdriver.

## Specifications

---

Voltage:	AC 120V
Frequency:	60Hz
Electric Power:	1500W



The symbol below  
is on the product or in the instruction manual.



This means that your electrical or electronic  
equipment should be disposed at the end of its life  
separately from your household waste.

There are separate collection systems  
for recycling in the your local area.

For more information,  
please contact the local authority or  
your retailer where you purchased the product.